



CLEANING INSTRUCTIONS

Water Kettle

Outside

Use a cleaning liquid for stainless steel surfaces.

Inside

The kettle must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.

Descaling procedure using white vinegar:

1. Fill the kettle with water up to 3/4 of the maximum level.
2. Bring the water to boil.
3. After the kettle has switched off, unplug the kettle and remove it from the power base.
4. Now add white vinegar (8% acetic acid) to the MAX level.
5. Leave the solution in the kettle overnight.
6. Empty the kettle and rinse the inside thoroughly.
7. Fill the kettle with fresh water and boil the water.
8. Empty the kettle and rinse it with fresh water again.
9. Repeat the procedure if there is still some scale in the kettle.

Tray

- Clean the tray with care.
- Use a slightly damp cloth (very little water!).
- DON'T clean with any aggressive liquid!
- DON'T clean with bleach!